

MRDial


Installation Instructions

Thank you for purchasing a MRDial for your Dillon Reloading Powder Measure. Installing the dial is very easy, just follow the directions carefully and you will not have any problems. If you happen to have any problems, please feel free to contact us at support@mrddial.com or 1-956-723-5150.

Ok, lets get started!


Assembling the dial:

1. Place the dial on a table with engraved side down.
2. Remove the cap screw on the back of the bolt.
3. Place bolt head into dial and tighten setscrew on the Zero mark on the dial to a flat spot on the bolt.
4. Place the cap screw through the center of the dial.
5. Snug up the cap and set screws with the hex wrenches provided. Thread lock is not recommended.

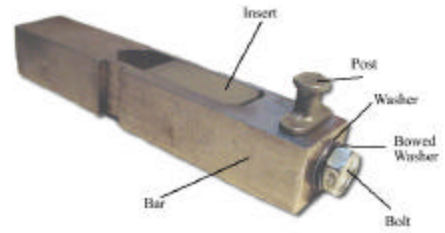

Installing the dial:

1. Remove any powder in your powder measure and remove the powder bar from your powder measure. Consult your instruction manual for more information.
2. Carefully tighten the bolt until the insert reaches the end. Then, give the wrench another ½ turn to compress the bowed washer (#14041). You should be able to remove the post holding the bolt in. If you still cannot remove the post, tighten a little more. Be sure not to over tighten the bolt, this may snap the original bolt.
3. When the post is removed, loosen and remove the bolt. Be sure not to loose the washer (#13958) and bowed washer (#14041). At this point, be sure to notice how the bowed washer is installed. This is important!
4. Remove the washer and bowed washer from the original bolt and install onto new dial.
5. Insert the dial back into the bar and tighten until the insert reaches the end, then give it a half turn to compress the bowed washer and reinsert the post.
6. Reinstall the powder bar and enjoy your new MRDial adjustment.

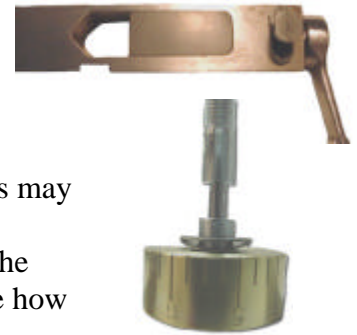

Troubleshooting:

If you notice that the insert feels loose or has a lot of play, then the bowed washer was installed incorrectly. Remove the dial using the instructions above and flip the bowed washer over and reinstall.

Reloading Tips:

- Before reloading, **ALWAYS** check the powder measure to make sure it has not changed.
- As you are reloading, check for consistency. The more often you check, the better ammo you will have.
- **ALWAYS** treat your powder measure as if it was your gun! **CHECK IT BEFORE USING IT!**

Visit www.MRDial.com to get any additional information or email us at support@mrddial.com
More detailed installation instructions are available on our website under support.